

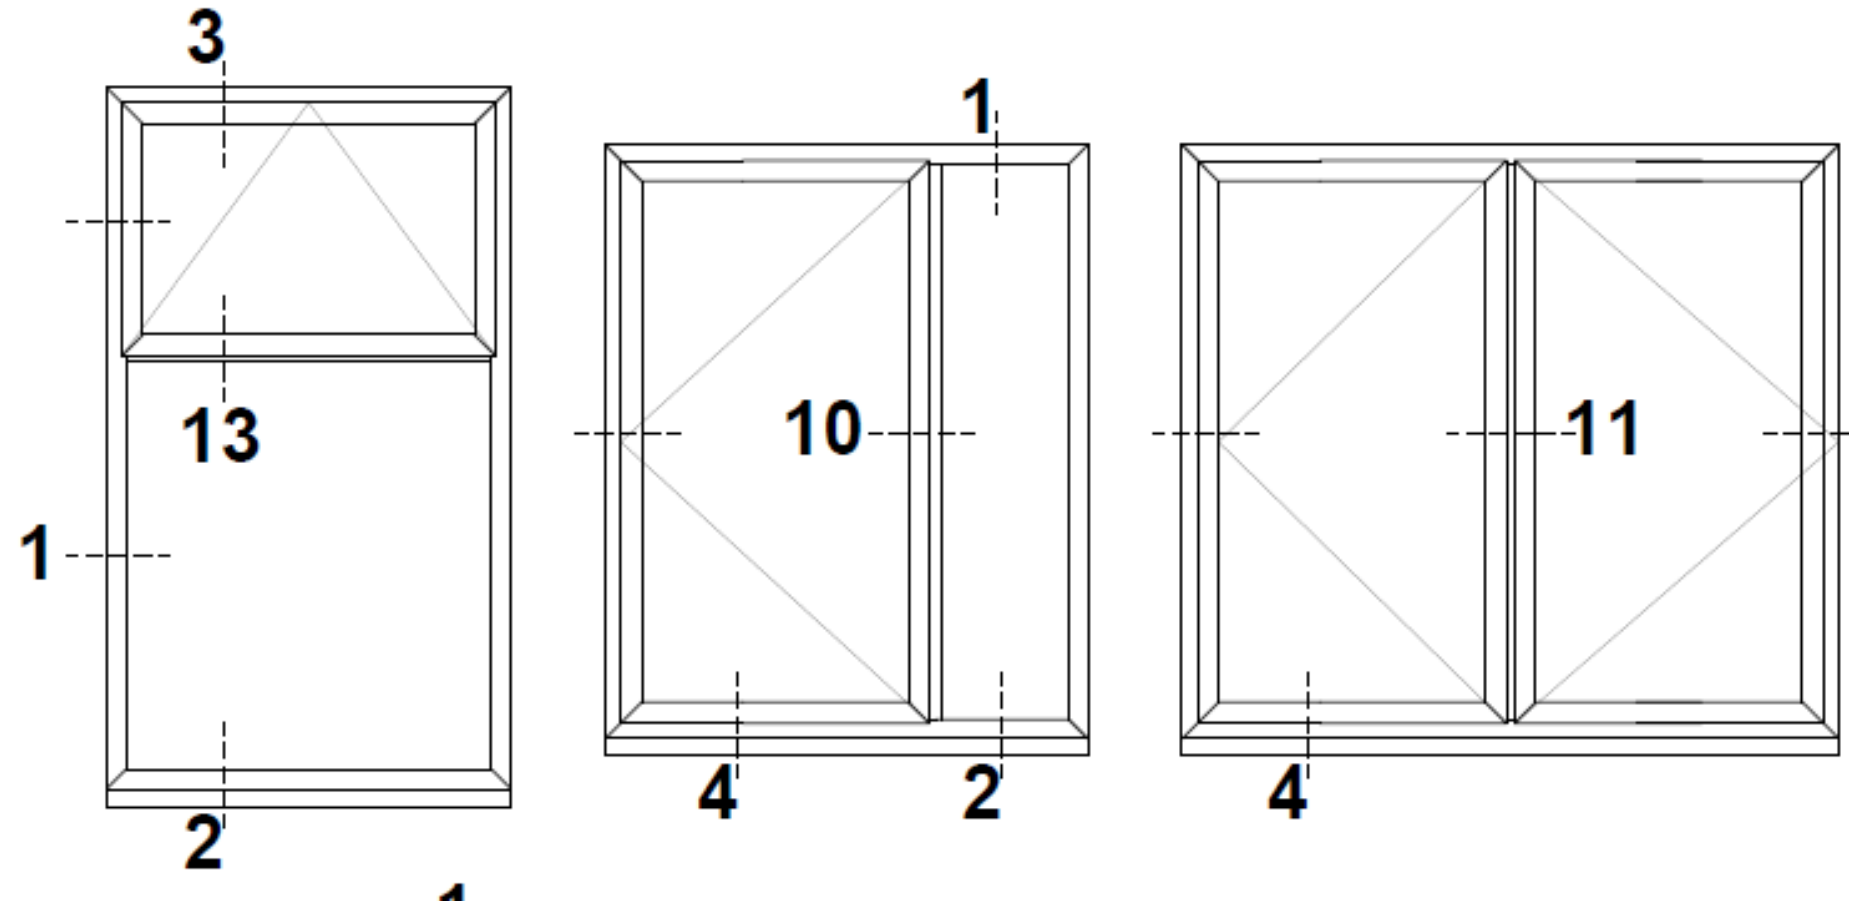


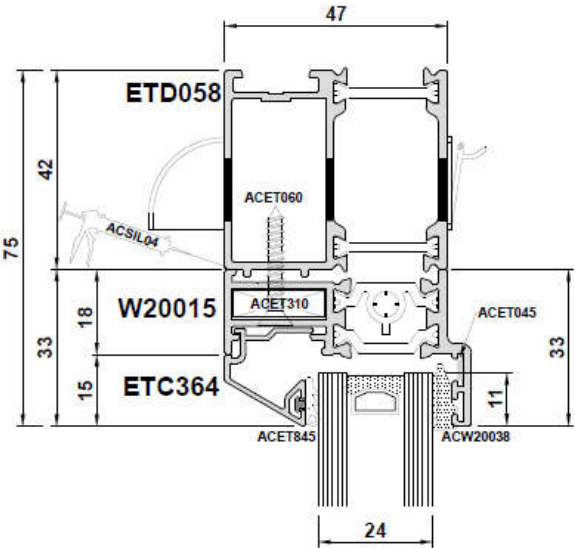

Detail 1A



Head Detail with add-on for ventilation

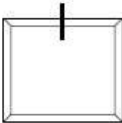

Do Not Scale From This Drawing


Detail 1A

Head Detail without add-on

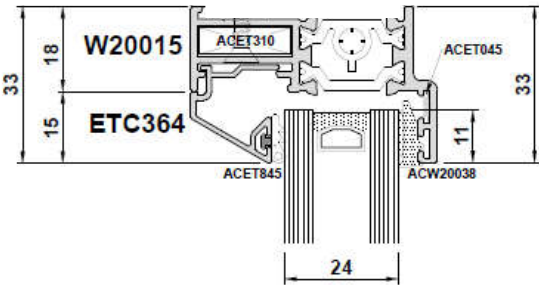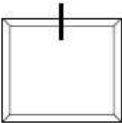



Do Not Scale From This Drawing

Detail 2A

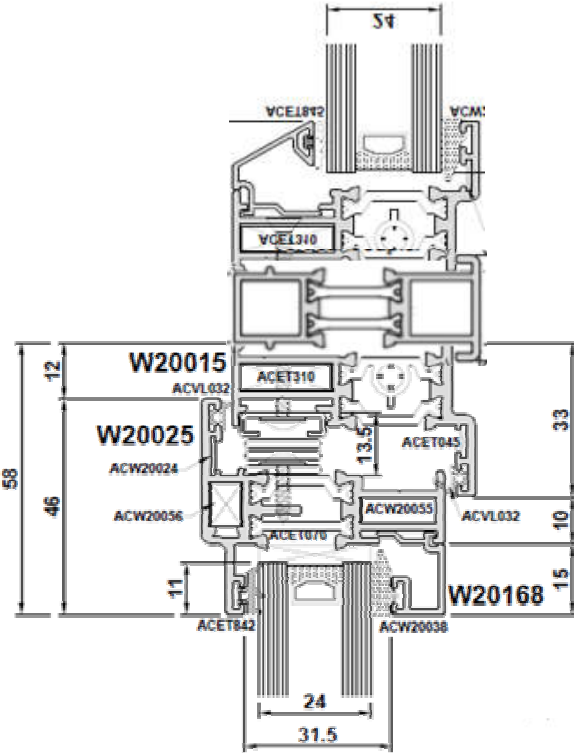



Do Not Scale From This Drawing

Detail 3A

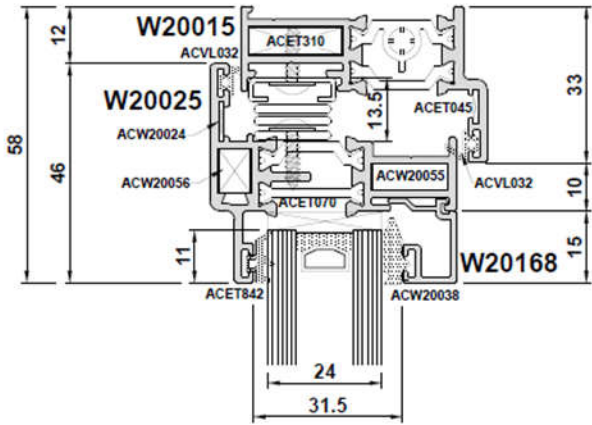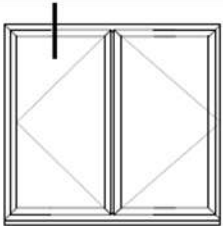



Do Not Scale From This Drawing

Detail 4A

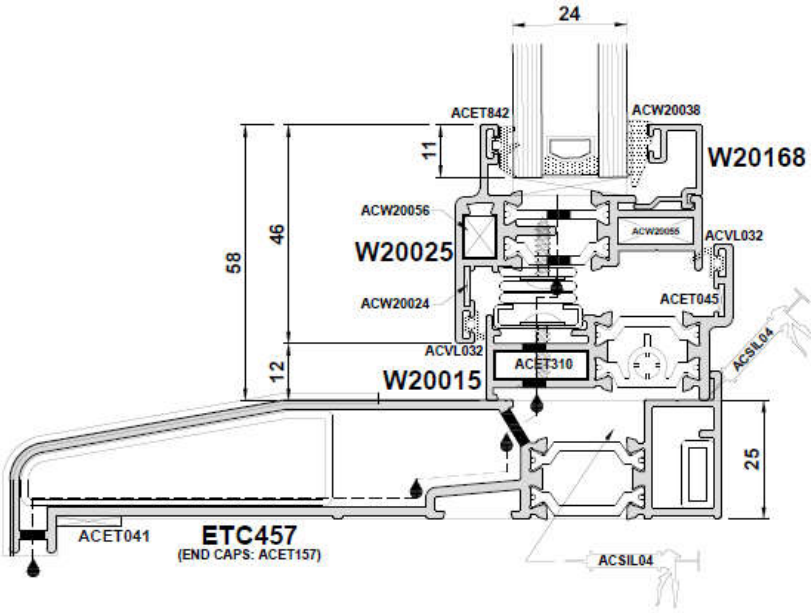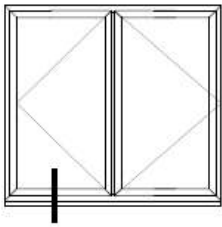



Do Not Scale From This Drawing

Detail 10B

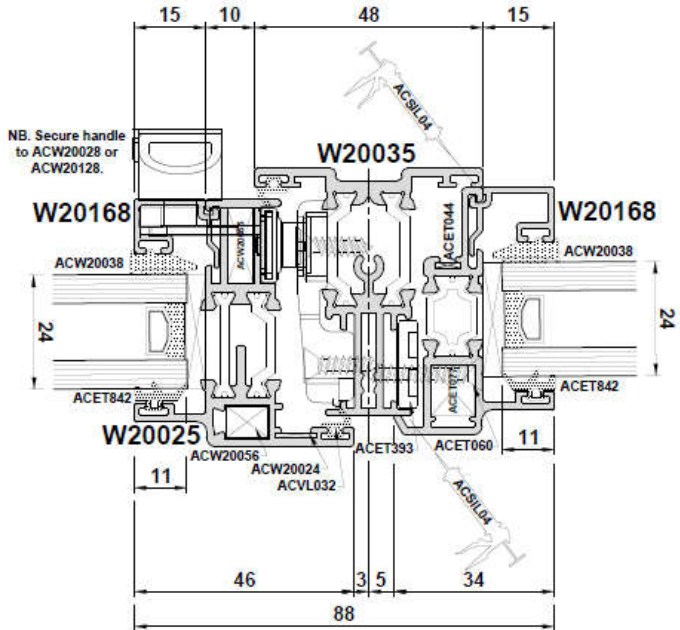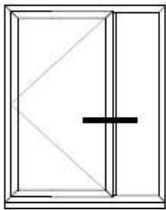



Do Not Scale From This Drawing

Detail 11A

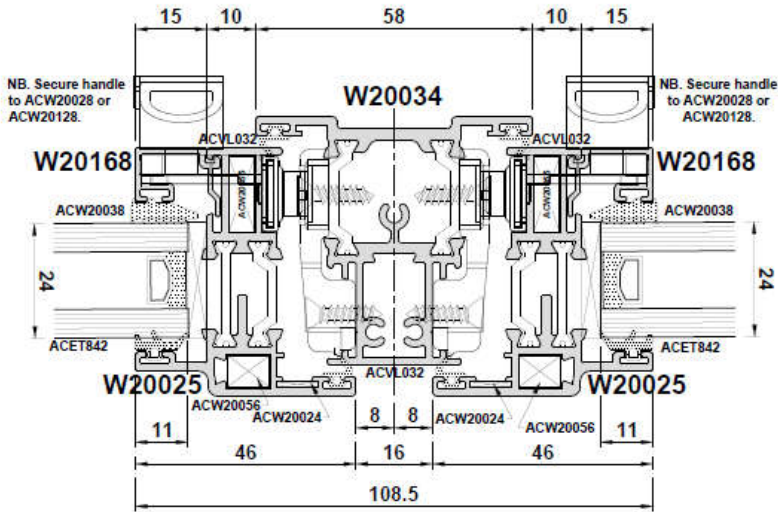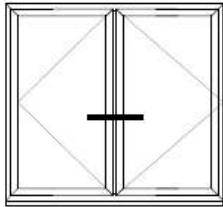

Do Not Scale From This Drawing



Detail 13A

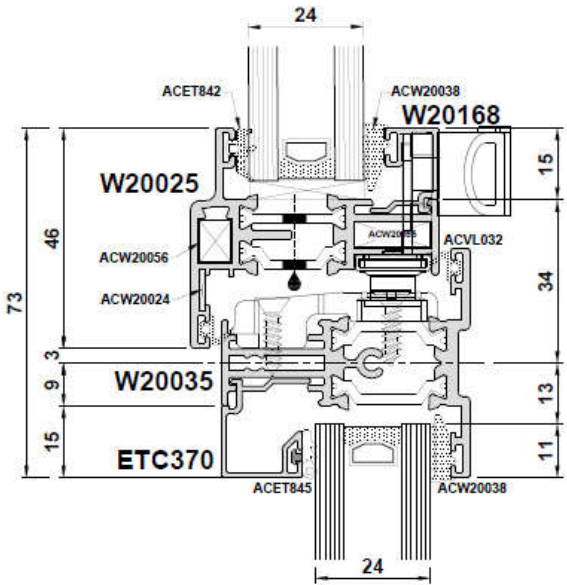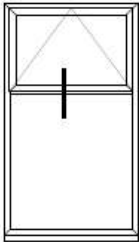

Note: Transoms will drain through the join to the outerframe.



Do Not Scale From This Drawing

Detail 11A

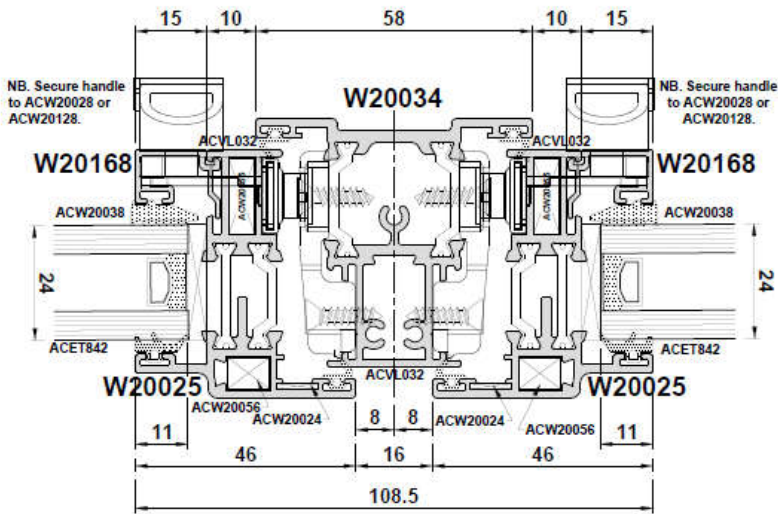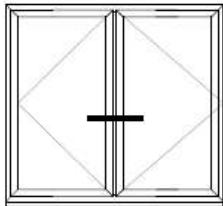



Do Not Scale From This Drawing

Detail 13A

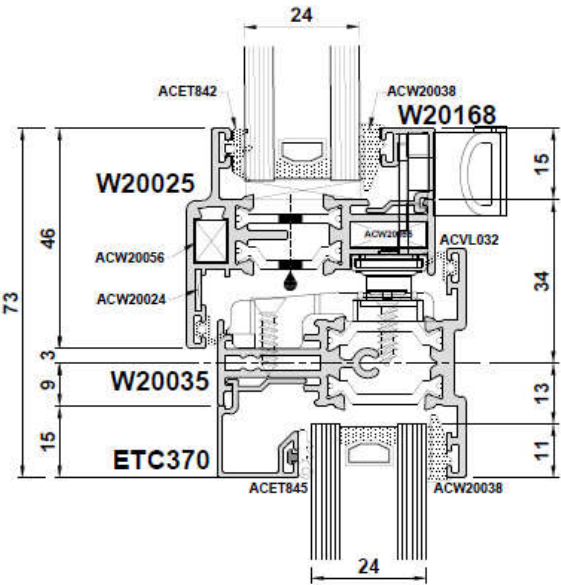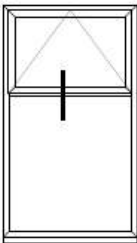

Do Not Scale From This Drawing

Detail 13A

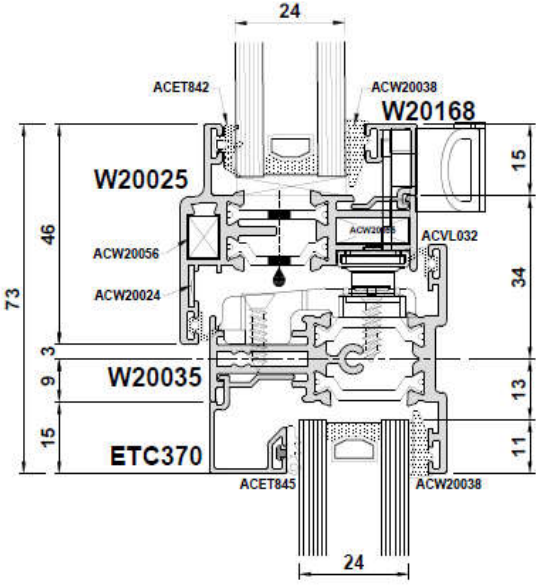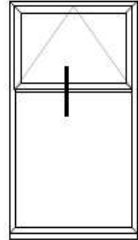

Do Not Scale From This Drawing