



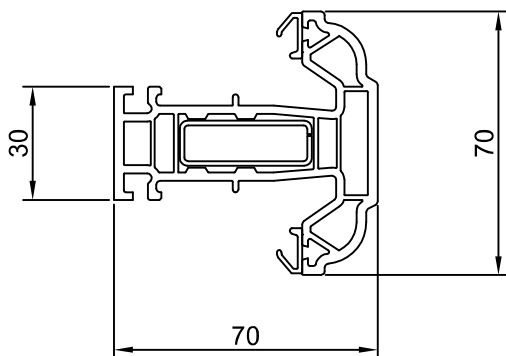


P10533 Storm 1 70mm Transom / Mullion
S00187 Reinforcing
Also Used As Flush French Casement Overlap

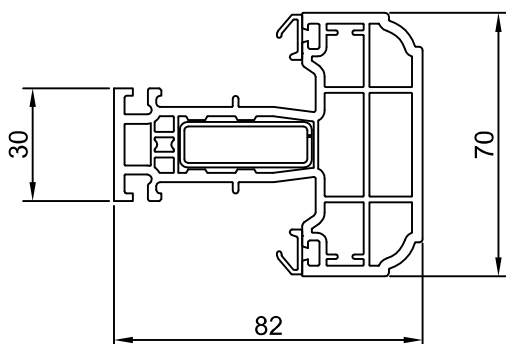

P90203 Storm 2 70mm Transom / Mullion
S00187 Reinforcing



P62203 Storm 70mm Dummy Transom / Mullion
S00187 Reinforcing

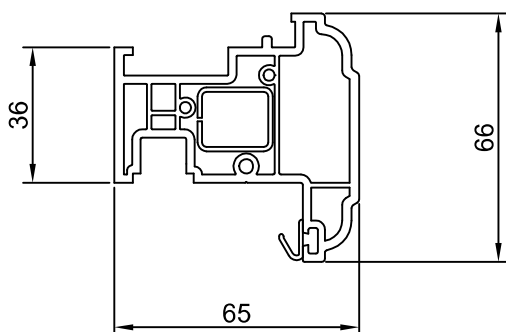

P10612 Storm French Casement Overlap
S41135 Reinforcing