




Open Out Doors




Detail 24

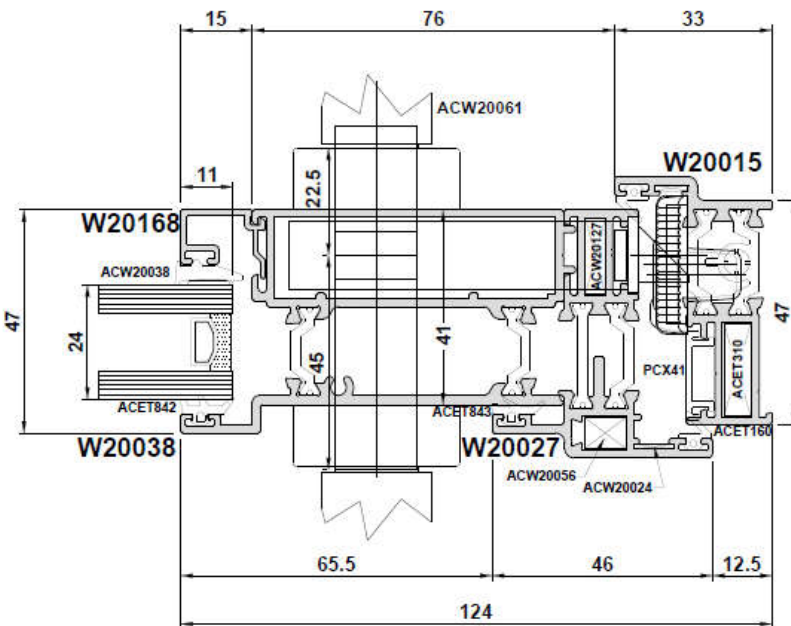

Detail 25A


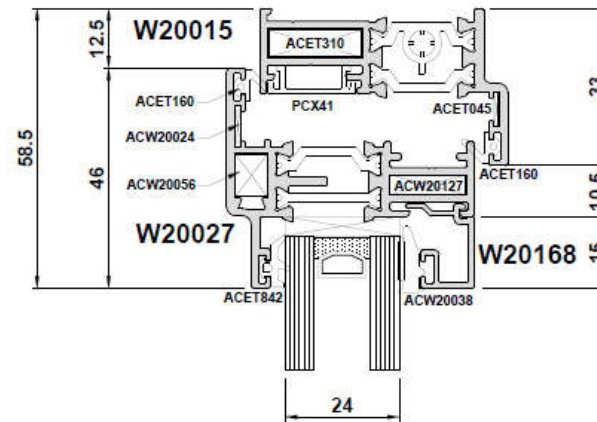


Detail 26A


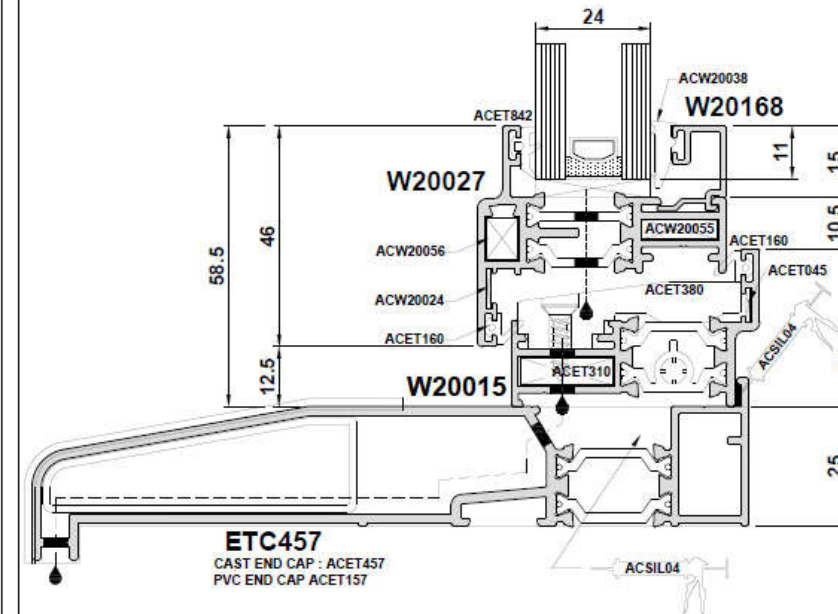


Do Not Scale From This Drawing



Detail 24

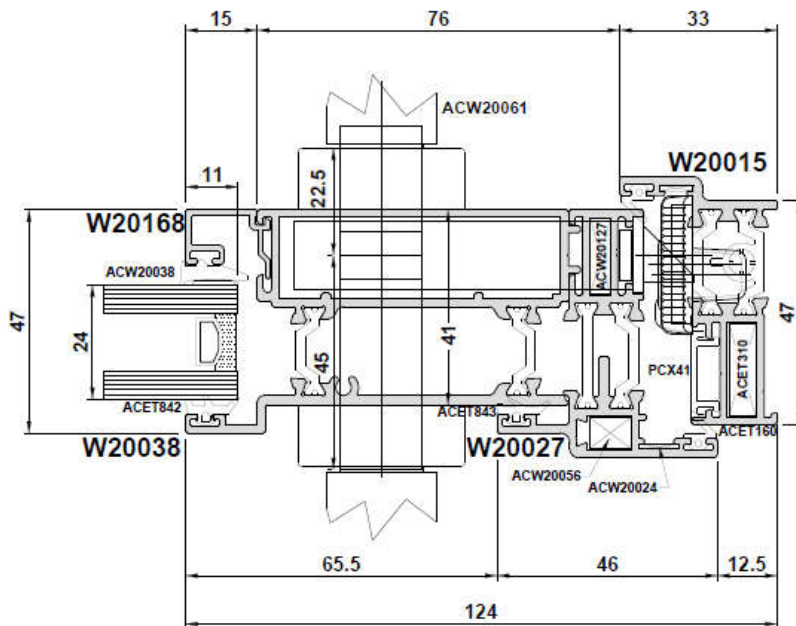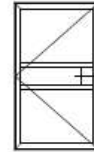

Detail 27

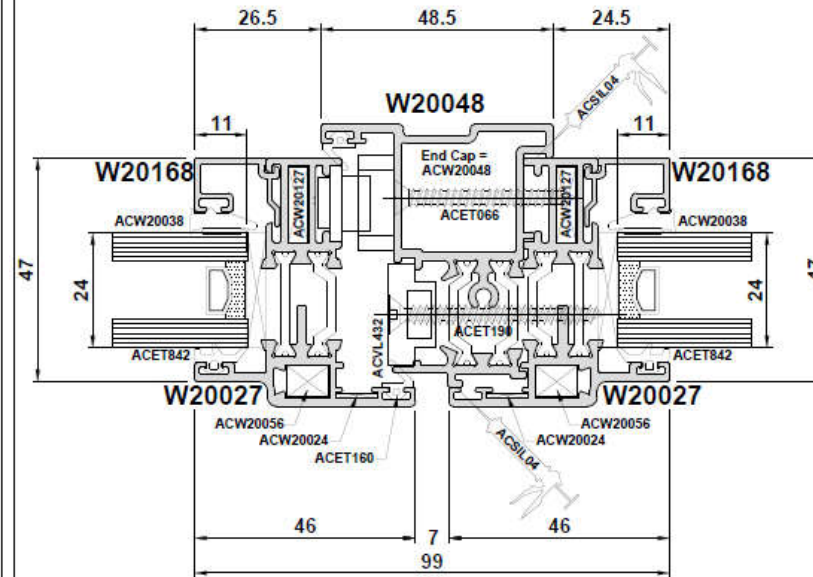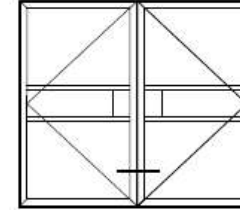

Detail 28

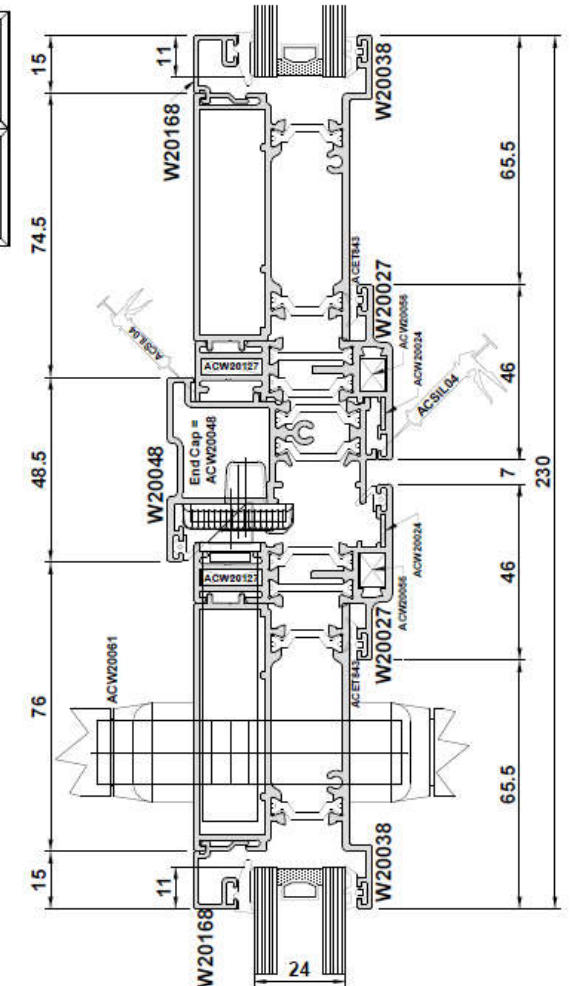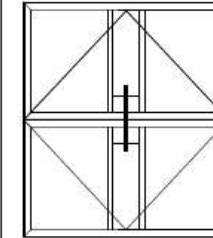


Not To Scale

Do Not Scale From This Drawing


Elegance Cross sections - Doors

Detail 29

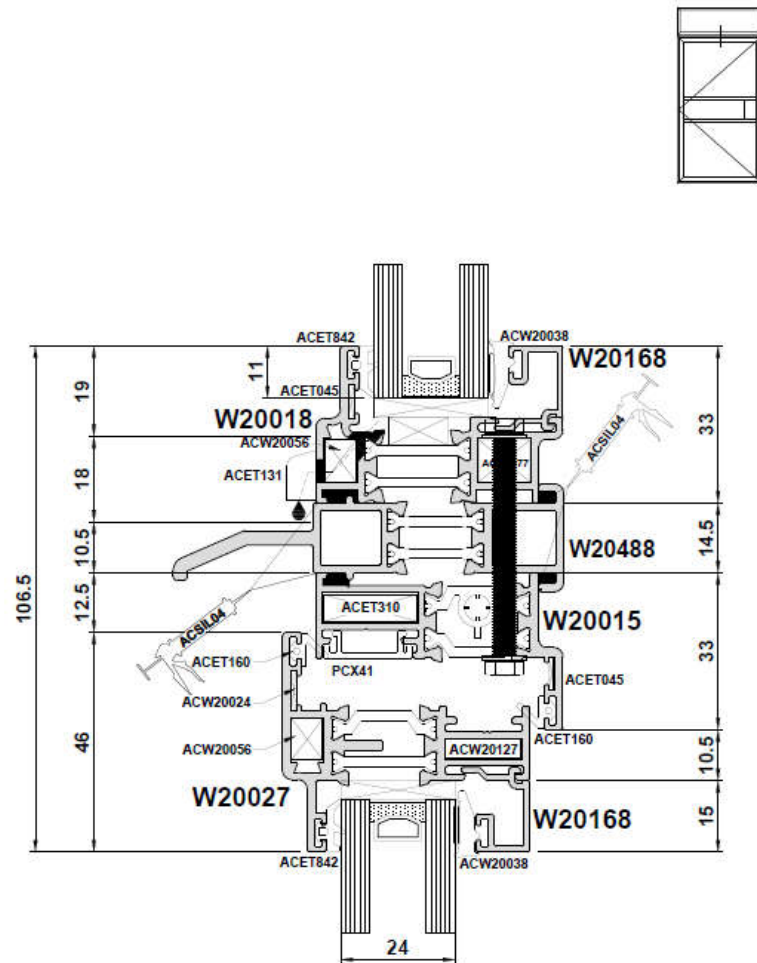

Do Not Scale From This Drawing

Detail 30

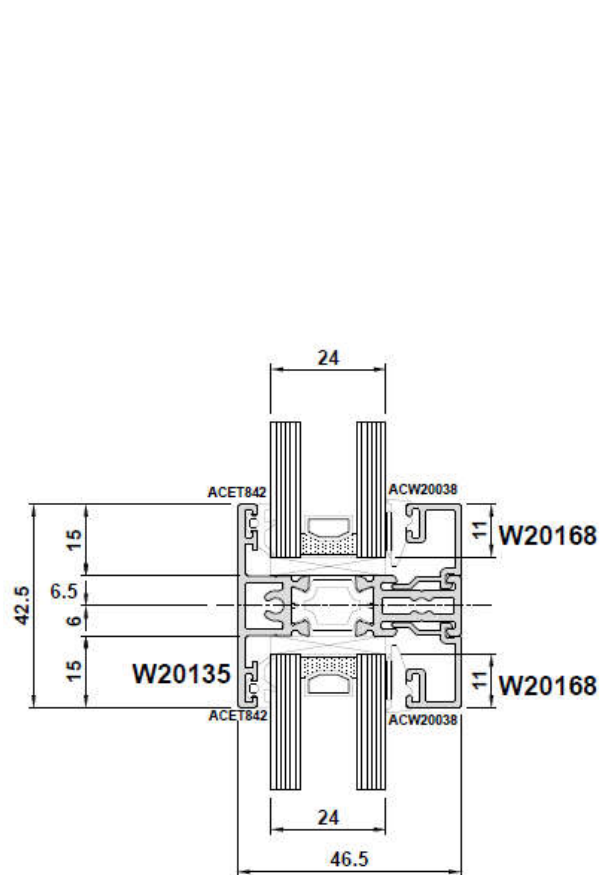

Note: Transoms will drain through the join to the sash.

Do Not Scale From This Drawing